SCHEMATIC DIAGRAM

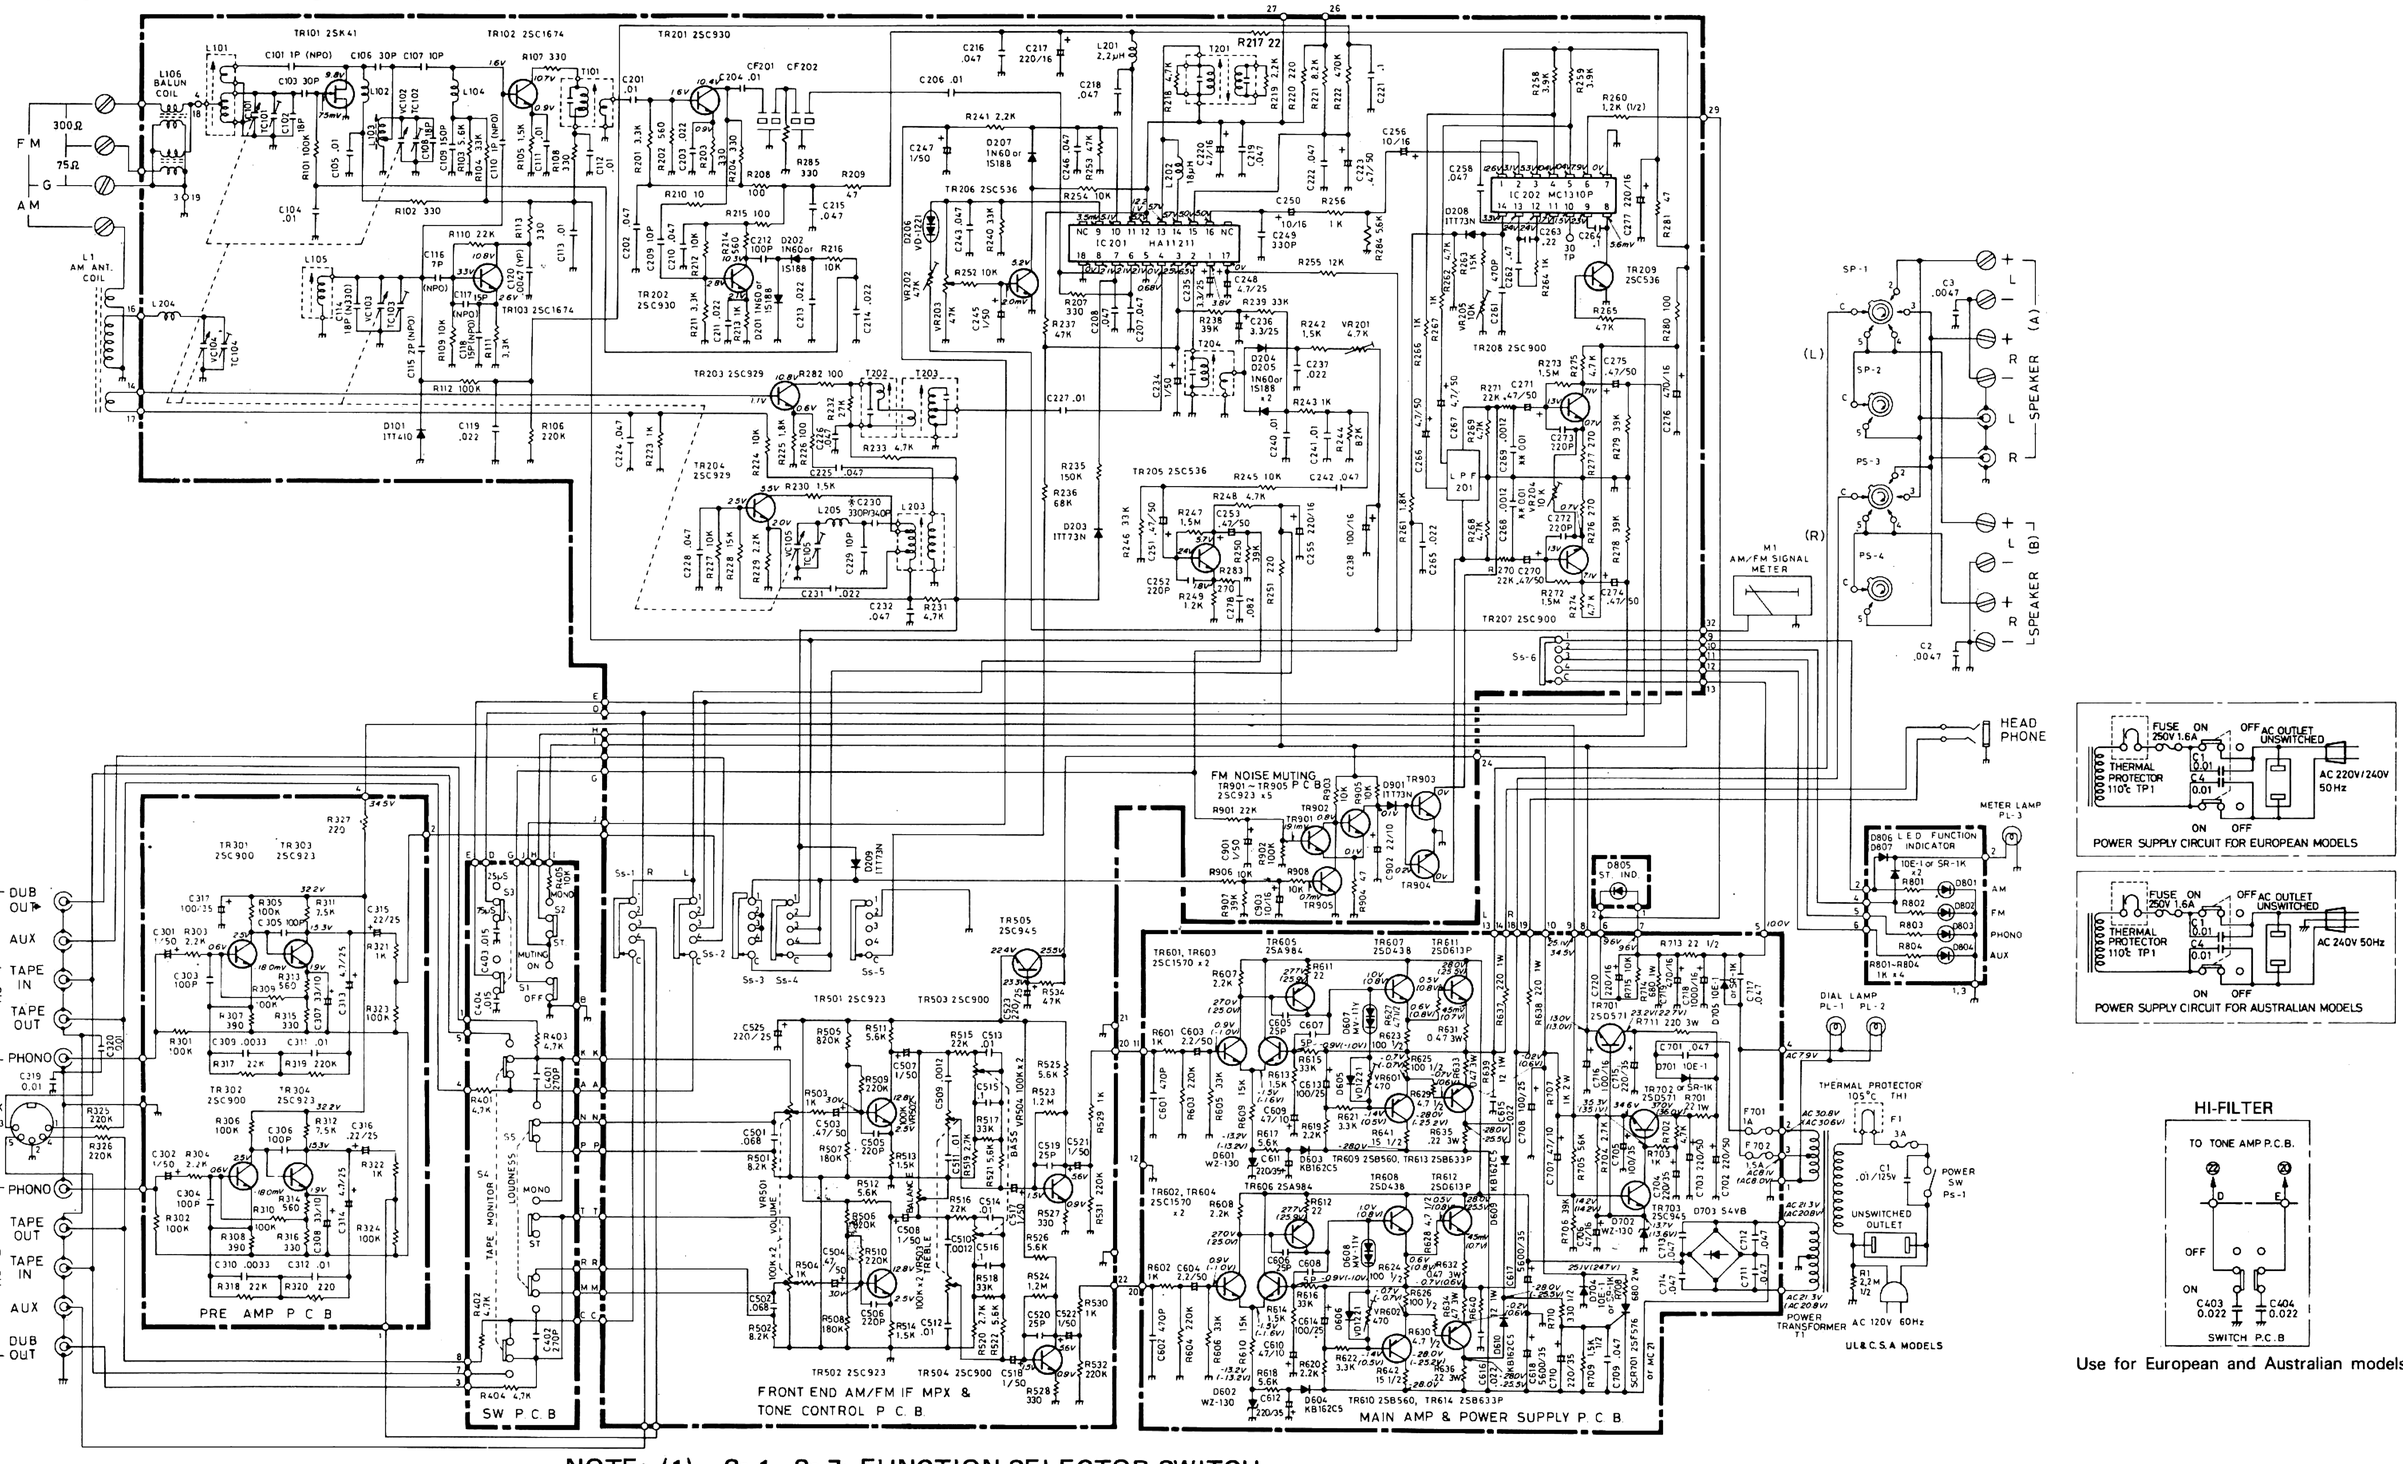

Use for European and Australian models.

NOTE: (1) Ss-1~Ss-7: FUNCTION SELECTOR SWITCH.
POSITION: 1 - AM, 2 - FM, 3 - PHONO, 4 - AUX, C - COMMON.

(2) Ps-1~Ps-2: POWER SWITCH.

(3) SP 1~SP 4: SPEAKER SELECTOR SWITCH.
POSITION: 1 - OUT, 2 - A, 3 - A, REV, 4 - B, 5 - A + B.

(4) ALL RESISTANCE VALUES ARE INDICATED IN "OHM" (K = 10^3 OHM, M = 10^6 OHM).

(5) ALL CAPACITANCE VALUES ARE INDICATED IN "μF" (P = 10^{-6} μF).

(6) * VALUES MAY VARY FROM UNIT TO UNIT FOR OPTIMUM PERFORMANCE.

(7) ** VALUES ARE USED FOR EUROPEAN AND AUSTRALIAN MODELS.

REALISTIC®

www.hifiengine.com